BLIND CORNER OPTIMISER PLUS - 900 & 1000mm LH* (IP2BCO9/10)


Assembly and fitting instructions


* These instructions show LH fitting, however product is universal.







IMPORTANT - The unit has a maximum loading limit of 40kg. Load should be evenly distributed across all trays with maximum load capacity for each tray not exceeding 10kg. All fixings supplied must be used for installation. Do not attach door until Corner Optimiser has been fully assembled and fitted. Illustrations show 900 or 1000mm left handed base units.

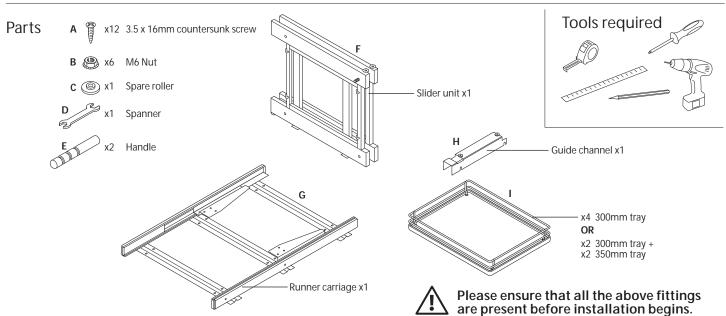


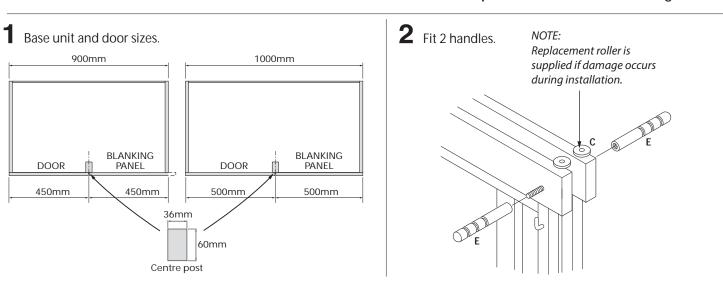

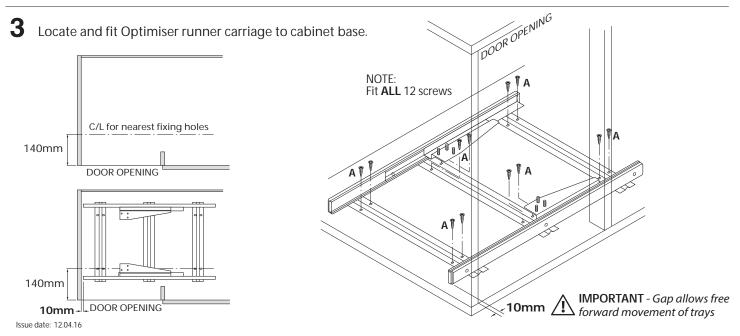


4 Position the two lower front rollers on the slider unit.

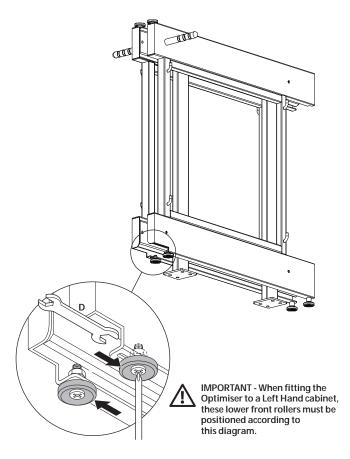


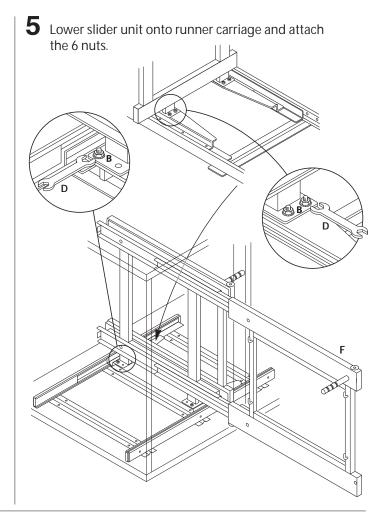


6 Push unit to far right and fit guide channel to left/front of runner carriage. See details if fine adjustment is needed.

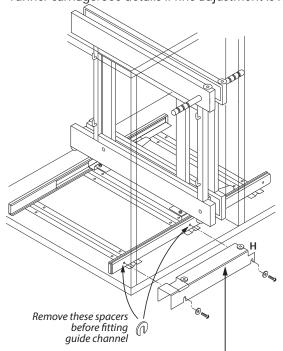

IMPORTANT: The guide channel height must be carefully adjusted to allow unrestricted forward movement of the Optimiser and to ensure the limit stop is held by the nylon wheel.

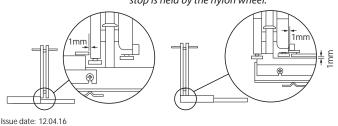

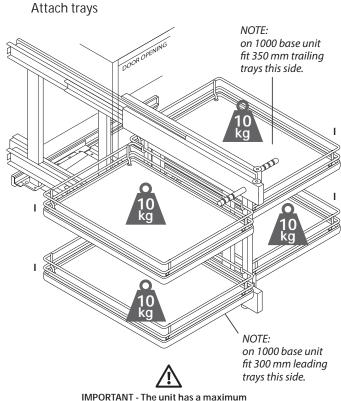

loading limit of 40kg. Load should be evenly distributed across all trays with maximum load capacity for each tray not exceeding 10kg.

Tray sizes

Base unit	Leading	Trailing	
900	300	300	
1000	300	350	