
3/4 CAROUSEL PLUS 900mm (IP2CC390)

Assembly and fitting instructions


To fit 900mm x 900mm 'L' shaped base unit.




IMPORTANT - The unit has a maximum loading limit of 30kg. Load should be evenly distributed across both trays with maximum load capacity for each tray not exceeding 15kg. All fixings supplied must be used for installation.

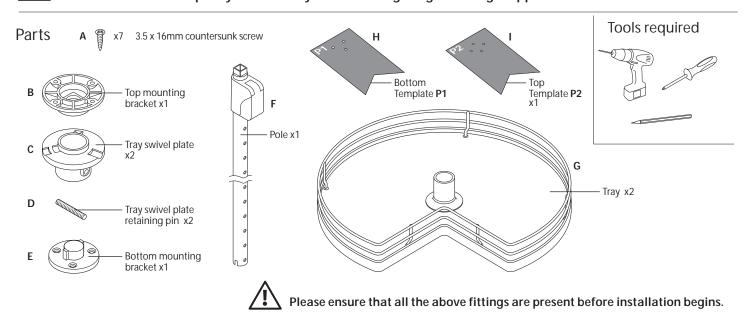

Mark base of cabinet for fitting carousel using the template (P1) provided. Drill pilot holes. Fit bottom mounting bracket using 3 screws.

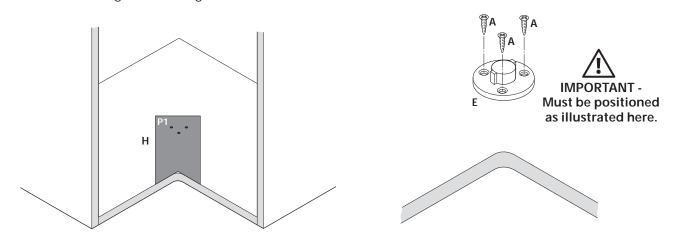


Mark top of cabinet for fitting carousel using the template (P2) provided. Drill pilot holes. Fit top mounting bracket using 4 screws.

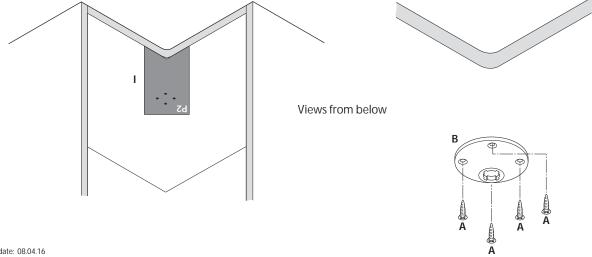


Issue date: 08.04.16

3 Assemble trays and swivel plates onto the pole before fitting into the cabinet.

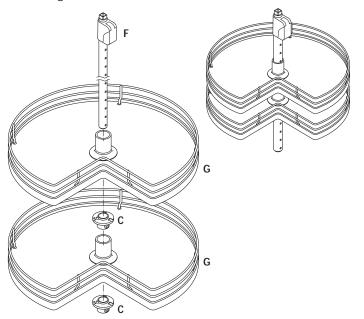


4 Lay the assembled unit on its side and insert into the cabinet. Rotate the unit so that the pole is vertical.

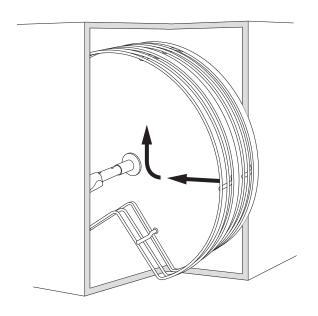

Locate the pole on the bottom mounting plate ensuring the lug is engaged. Extend the pole so that the top mounting plate is trapped.

Rotate the unit including the mounting plates until the cam mechanism stops the trays centrally within the cabinet opening.

7 Select the required tray heights and screw the retaining pins into the pole through each tray swivel plate.

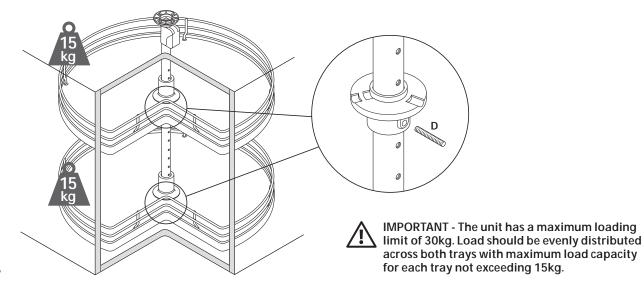

Issue date: 08.04.16